


Packaging the CX1200 / CX1000 Print Engine for Repair or Return

1. Leave the Toner cartridges, ITU and Fuser in the printer. They are necessary to stabilize the printer in transit.
2. Close the left side MP Feed Door.
3. Unplug the round cable leading to the door.
4. Unplug Power and Ethernet to the printer.
5. Tape closed the Waste Toner Door located on the left side near the bottom and back of the printer.

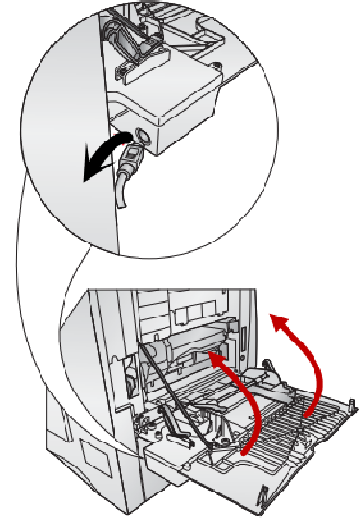

6. Package the printer in its original box or a palletized box with at least 3 inches of bubble wrap on all sides. FedEx will allow a box of this type and weight to be shipped.

